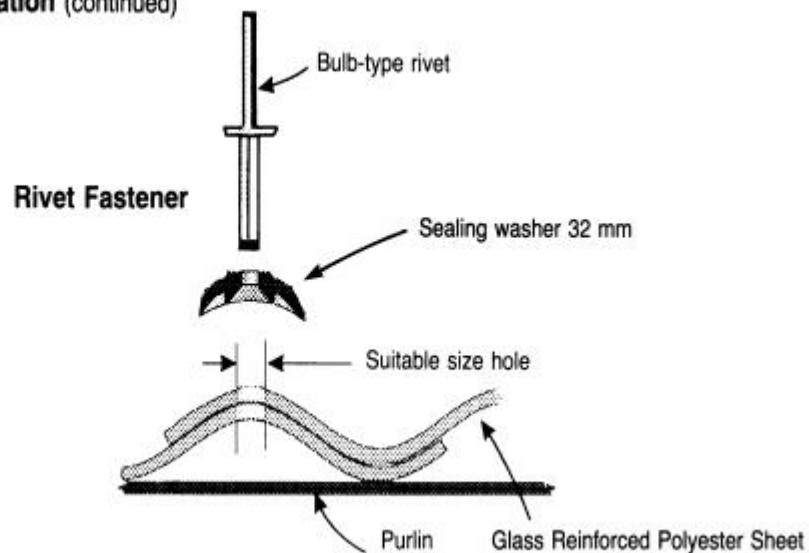


Side Lap Fasteners Installation (continued)**CHECKING THE INSTALLED SHEET**

On completion make the following checks:

- No cracks or damage has occurred from fastening.
- No damage has occurred from dropped articles.
- No damage has occurred from accidental foot traffic.
- Ensure that drill holes are oversize as specified for the sheet length and that fastener being used is the correct size and type.
- There are no gaps at side or end laps of the Alsynite GRP sheet.
- Remove all debris from the sheeting.
- Install signage as required by Building Regulations.

MAINTENANCE OF GRP SHEETING

While normal rain provides a self washing action, the roof pitch or local environment can allow the accumulation of dust on the inside and outside of the sheeting.

Where accumulation is a problem, hose and broom off the dirt build-up.

In older installations, when light transmission levels can no longer be determined, sheeting can be replaced with a progressive maintenance program.